

# Groovy Wall™ Smooth-Edge Fabric Framing System Wall Mount Setup Instructions



## Step 1

Grab 2 corner brackets (one flat and one with threaded allen wrench screws), un-tightening the screws a little bit so the flat corner bracket and the screw corner bracket are flat enough to insert into the grooved corner sections of the frame.



## Step 2


Make sure the screws are face out from the frame and the flat edge of the frame is lined up. After inserting the corner bracket attachments and connecting the frames together, tighten the screws very tightly to ensure a tight fit.



## Step 3


Repeat step 1 & 2 for all corners making sure the flat edge of the frame is lined up and that all the screws are very tight.

You can use the bracket along the vertical or horizontal section located on the inside of the frame

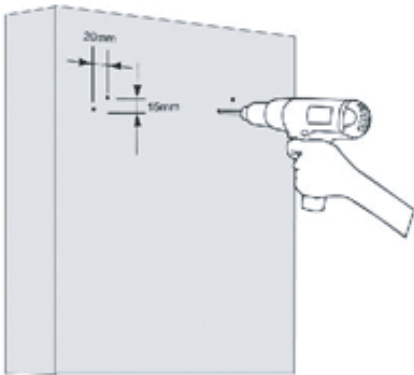


## Step 4

Screw 4 wall mounts to wall close enough for the threaded screw to be able to apply pressure to the frame.

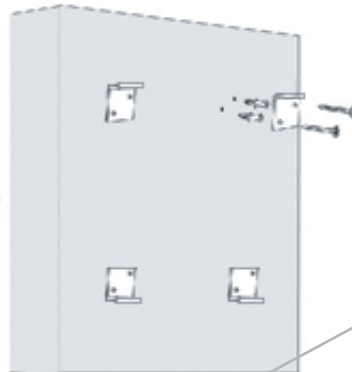

## Step 5

Use the threaded allen wrench screw to apply pressure along each side of the frame.

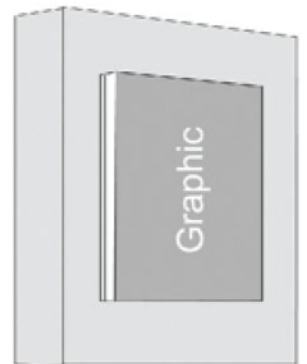

## Step 6

Attach fabric graphic to the frame.

**GROOVY**  
**WALL**  
FABRIC FRAMING SYSTEM™

THE  
**Fabric**  
**FACTORY**  
at  
BeautifulDisplays

2370 North McRoy Drive  
Carbondale, Illinois 62901  
800.697.4670 • 618.529.7031 fax  
[info@beautifuldisplays.com](mailto:info@beautifuldisplays.com)

